

Fenner

Fenaflex® Tyre Couplings

07

Fenner Fenaflex®Tyre couplings provide all the desirable features of an ideal flexible coupling, including Taper-Lock® fixing. The Fenner Fenaflex® Tyre coupling is a "torsionally elastic" coupling offering versatility to designers and engineers with a choice of flange combinations to suit most applications.

The flanges are available in either F or H version Taper-Lock® fitting or bored to size B.

With the addition of a spacer flange, the coupling can be used to accommodate standard distance between shaft ends and facilitate pump maintenance.

Fenner Tyre couplings can accommodate simultaneous maximum misalignment in all planes without imposing undue loads on adjacent bearings and the excellent shock-absorbing properties of the flexible tyre reduce vibrations and torsional oscillations.

Fenner tyres are available in natural rubber compounds for use in ambient temperatures between -50°C to +50°C. Neoprene rubber compounds are available for use in adverse operating conditions e.g. oil or grease contaminations and can be used in temperatures of - 15° C to + 70° C.

F.R.A.S. tyres are available for use when fireresistance and antistatic (F.R.A.S.) properties are required.

TORQUE-BORE RANGE

The range includes couplings with torque capacity upto 12606 Nm. and bore diameters upto 190 mm.

MISALIGNMENT

Handles parallel, angular and axial displacements, either singly or in any combination. They can accommodate parallel misalignment upto 6 mm, angular misalignment up to 4° and end float up to 8 mm.

TORSIONALLY SOFT

Cushions against destructive shock loads protecting the complete system, preventing expensive breakdowns and lengthens machine life.

FREE OF BACKLASH

Does not create 'snatch' on take up of the drive.

INSTALLATION

Requires neither special tools nor skilled labour to assemble. Alignment is quickly checked by placing a straight edge across outside diameter of flanges. The split flexible tyre is then positioned in the flanges and the screws tightened into place.

DAMPING

Reduces vibration and torsional oscillations developed in internal combustion engines, the amplitude of which increases greatly at critical points in the speed range. Fenner Tyre coupling dampens these destructive vibrations.

MAINTENANCE

Because there are no moving parts, no lubrication is required. Periodic visual inspection of the tyre is all that is necessary.

EASY ELEMENT REPLACEMENT

To replace flexible element simply loosen the clamping screws, remove the tyre and replace with a new one. It is not necessary to move either driver or driven machine or coupling flanges.

ENVIRONMENT

Use of natural or Neoprene rubber compounds makes the Fenner Tyre coupling suitable for use in most conditions. For fire hazard areas the F.R.A.S. tyre is recommended. This allows free flow of electricity between the two shafts to avoid static electricity buildup.



Fenner Tyre Couplings - Selection

DETAILS REQUIRED FOR COUPLING SELECTION

- 1. Type of driven machine and operating hours per day.
- 2. Speed and power absorbed by driven machine (if absorbed power is not known, calculate on power rating of prime mover).
- 3. Diameters of shafts to be connected.

PROCEDURE

- a. Service Factor: Determine the required service factor from table 07-01.
- **b. Design Power**: Multiply the normal running power by the service factor. This gives the design power which is used as a basis for selecting the coupling.
- **c.** Coupling Size: Refer to table 07-03 (page 07-06) and from the appropriate speed, read across until a power greater than that required in step (b) is found.

The size of Fenner Tyre Coupling required is given at the head of that column.

d. Bore Size: Check from dimension tables that chosen flanges can accommodate required bores.

EXAMPLE


A Fenner Tyre Coupling is required to transmit 45 kW from an A.C. Electric Motor which runs at 1440 rev/min to a rotary screen for 12 hours a day. The motor shaft is 60 mm diameter and the screen shaft is 55 mm diameter.


- **a. Service Factor**: From table 07-01 the service factor is 1.4.
- b. Design Power: Design Power = 45 x 1.4 = 63 kW.
- c. Coupling Size: By reading across from 1440 rev/min in table 07-03 (page 07-06) the first figure to exceed the required 63 kW in step (b) is 76.1 kW. The size of coupling is F100.
- d. Bore Size: By referring to table 07-02 (page 07-05) it can be seen that both shaft diameters fall within the bore range available.

TABLE 07-01: SERVICE FACTORS

Special Cases	Type of Driving Unit									
For applications where substantial shock, vibration and torque fluctuations occur and for reciprocating machines e.g. internal combustion engines, piston pumps and compressors, refer to Fenner with all machine details for torsion analysis		ectric Motors am Turbine	-	Internal Combustion Engines Steam Engines Water Turbines						
		Opera	tional ho	urs per da	ay					
Type of Driven Machine	10 and under	Over 10 to 16 inclusive	over 16	10 and under	Over 10 to 16 inclusive	over 16				
CLASS 1 Agitators, Brewing machinery Centrifugal compressors and pumps, Belt conveyors, Dynamometers, Line shafts, Fans upto 7.5 kW, Blowers and Exhausters (except positive displacement) Generators.	0.8	0.9	1.0	1.3	1.4	1.5				
CLASS 2 Clay working machinery, General Machine tools, Paper mill beaters and winders, Rotary pumps, Rubber extruders, Rotary screens, Textile machinery, Marine propellers and fans over 7.5 kW.	1.3	1.4	1.5	1.8	1.9	2.0				
CLASS 3 Bucket elevators, Cooling tower fans, Piston compressors and pumps, Foundry machinery, Metal presses, Paper mill calendars, Pulverisers and Positive displacement blowers.	1.8	1.9	2.0	2.3	2.4	2.5				
CLASS 4 Reciprocating conveyors, Gyratory crushers, Mills (ball, pebble and rod), Rubber machinery (Banbury mixers and mills) and Vibratory screens	2.3	2.4	2.5	2.8	2.9	3.0				



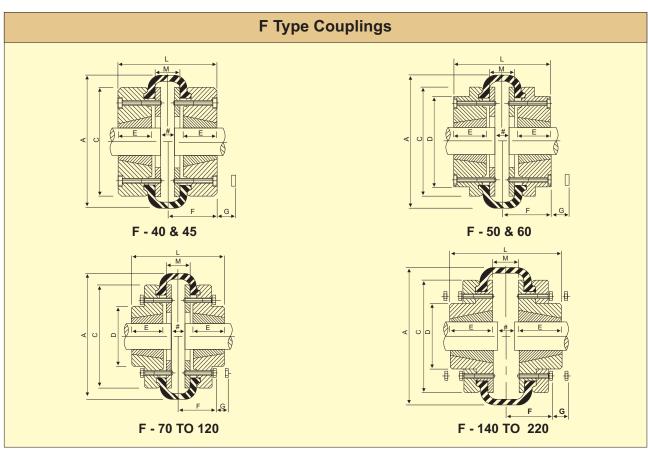

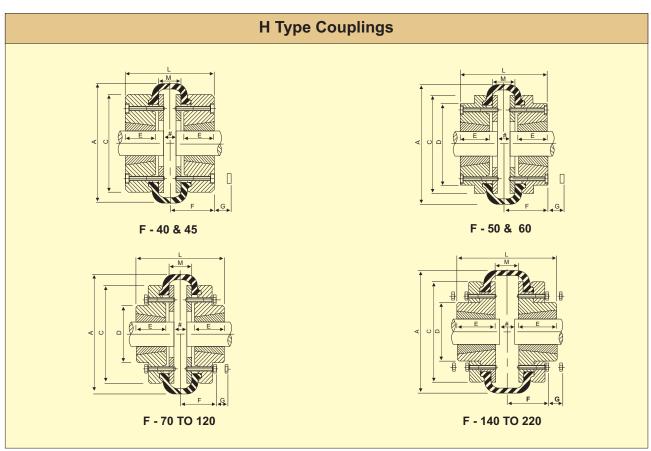

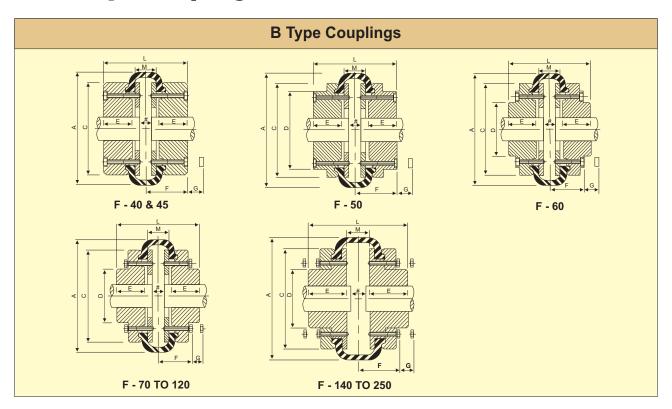


TABLE 07-02: DIMENSIONS "F&H" AND "B" TYPE COUPLINGS

				TYPE F	& H							TYP	EB						‡	+	No. of
Size	Bush No.	Max Bore	L	D	E	F	يل ا	Approx Weight Kg *	Max Bore	Min Bore	L	D	E	F	Set Screw on key	Approx Weight Kg *	A	С	G	M	screws per flange
F40	1008	25	67	-	22	33.5	29	1.4	30	11.00	67	-	22	33.5	M5	2.0	104.0	82	43	23	4
F45	1108	28	67	-	22	33.5	29	3.0	32	11.00	73	-	25	36.5	M5	2.2	120.0	94	43	23	4
F50	1210	32	78	79.0	25	39.0	38	3.1	38	16.00	92	79	32	46.0	M5	4.0	133.5	100	43	28	4
F60	1610	42	86	103.0	25	43.0	38	5.2	48	16.00	112	73	38	43.0	M6	5.0	165.0	125	43	36	5
F70	1610	42	92	76.0	25	50.5	38	7.4	55	19.05	132	82	45	50.5	M6	8.0	197.0	144	10	42	5
F80	2012	50	111	95.0	32	53.0	47	9.2	65	25.40	149	95	51	53.0	M10	12.0	211.0	167	10	47	6
F85	2012	50	112	103.0	32	53.5	47	12.5	70	31.75	154	103	53	53.5	M12	14.0	222.0	179	13	48	6
F90	2517	60	140	110.0	45	59.5	50	15.0	76	31.75	164	110	57	59.5	M12	15.0	235.0	188	13	50	6
F100	2517	60	148	124.0	45	61.5	50	20.0	85	31.75	178	124	60	61.5	M12	21.0	254.0	216	13	58	6
F110	2517	60	140	134.0	45	63.5	50	26.5	90	31.75	180	134	65	63.5	M12	28.0	279.0	233	14	50	6
F120	3020	75	157	152.0	51	70.0	68	35.5	102	38.10	207	152	76	70.0	M12	41.0	314.0	264	14	55	6
F140	3535	90	204	194.5	89	76.0	89	67.2	120	75.00	204	195	89	76.0	M20	61.0	359.0	313	14	26	8
F160	4040	100	220	216.0	102	78.0	110	91.0	140	75.00	220	216	102	78.0	M20	86.0	402.0	345	19	16	8
F180	4545	110	258	266.0	114	94.0	126	146.0	150	75.00	258	266	114	94.0	M20	141.0	470.0	398	19	30	10
F200	4545	110	278	266.0	114	103.0	126	182.0	150	75.00	276	266	114	103.0	M20	179.0	508.0	429	19	48	12
F220	5050	127	312	267.0	127	118.0	140	320.0	160	90.00	312	267	127	118.0	M20	312.0	562.0	474	20	56	12
F250	-	-	-	-	-	-	-	-	190	100.00	360	290	150	125.0	M20	500.0	628.0	532	25	60	12

* Weights given are for min. bore complete coupling.

† M is the distance between flanges.

Dimensions are in millimetres

[#] Shaft ends, although normally located 'M' apart - can project beyond the flanges as shown. In this event, allow sufficient space between shaft ends for the float and misalignment.

G is the amount by which clamping screws need to be withdrawn to release tyre.

ξ J is the wrench clearance to allow for tightening and loosening the bush on the shaft. The use of shortened wrench will allow this dimension to be reduced.



Power Ratings

TABLE 07-03: POWER RATINGS (kW)

Speed						11100		UPLIN	IG SIZ	Έ							
(rev/min)	F40	F45	F50	F60	F70	F80	F85	F90	F100	F110	F120	F140	F160	F180	F200	F220	F250
100	0.22	0.39	0.56	1.11	1.70	2.65	3.2	3.82	5.29	7.46	12.4	19.7	32.6	57.4	84	104	132
200	0.44	0.78	1.11	2.22	3.39	5.30	6.4	7.64	10.00	14.90	24.8	39.4	65.2	115	168	209	264
300	0.66	1.17	1.67	3.33	5.09	7.95	9.6	11.50	15.90	22.40	37.1	59.1	97.8	172	252	313	396
400	0.88	1.56	2.22	4.44	6.79	10.60	12.8	15.30	21.20	29.80	49.5	78.8	130	230	336	418	529
500	1.10	1.95	2.78	5.55	8.48	13.20	16.0	19.10	26.40	37.30	61.9	98.5	163	287	420	522	660
600	1.32	2.34	3.33	6.66	10.20	15.90	19.2	22.90	31.70	44.70	74.3	118	196	345	504	627	793
700	1.54	2.73	3.89	7.77	11.90	18.50	22.4	26.80	37.00	52.20	86.6	138	228	402	588	731	925
720	1.58	2.80	4.00	7.99	12.20	19.10	23.0	27.50	38.10	53.70	89.1	142	235	414	605	753	951
800	1.76	3.12	4.44	8.88	13.60	21.20	25.6	30.60	42.30	59.60	99.0	158	261	459	672	836	1057
900	1.98	3.00	5.00	9.99	15.30	23.80	28.8	34.40	47.60	67.10	111.0	177	293	517	756	940	1198
960	2.11	3.74	5.33	10.70	16.30	25.40	30.7	36.70	50.80	71.60	119.0	189	313	551	806	1003	1269
1000	2.20	3.90	5.55	11.10	17.00	26.50	32.0	38.20	52.90	74.60	124.0	197	326	574	840	1045	1322
1200	2.64	4.68	6.66	13.30	20.40	31.80	38.4	45.90	63.50	89.50	149.0	236	391	689	1008		
1400	3.08	5.46	7.77	15.50	23.80	37.10	44.8	53.50	74.00	104.00	173.0	276	456	804			
1440	3.17	5.61	7.99	16.00	24.40	38.10	46.0	55.00	76.10	107.00	178.0	284	469	827			
1600	3.52	6.24	8.88	17.80	27.10	42.40	51.2	61.20	84.60	119.00	198.0	315	522				
1800	3.96	7.02	9.99	20.00	30.50	47.70	57.6	68.80	95.20	134.00	223.0	355					
2000	4.40	7.80	11.10	22.20	33.90	53.00	64.0	76.40	106.00	149.00	248.0						
2200	4.84	8.58	12.20	24.40	37.30	58.30	70.4	84.10	116.00	164.00							
2400	5.08	9.36	13.30	26.60	40.70	63.60	76.8	91.70	127.00								
2600	5.72	10.14	14.40	28.90	44.10	68.90	83.2	99.40	137.00								
2800	6.16	10.92	15.50	31.10	47.50	74.20	89.6	107.00									
2880	6.33	11.23	16.00	32.00	48.90	76.30	92.1	110.00									
3000	6.60					79.50	96.0										
3500	7.70			38.90	59.40			s in hea									
3600	7.92	14.04	20.00	40.00					- 1								

For speeds below 100 rev/min and intermediate speeds, use normal torque ratings.

Physical Characteristics

TABLE 07-04: PHYSICAL CHARACTERISTICS

Size	Max. Speed	Tor (N		Moment of inertia	Torsional Stiffness	Maximum Misalignment (mm)			
Size	(rev/min)	Nominal	Max.	MR² (kgm²)	(Nm/°)	Parallel	End float ±		
F40	4500	21	64	0.00148	5	1.1	1.3		
F45	4500	37	110	0.00250	9	1.2	1.5		
F50	4500	53	160	0.00349	13	1.3	1.7		
F60	4000	106	318	0.01030	26	1.6	2.0		
F70	3600	162	487	0.01811	41	1.9	2.3		
F80	3100	253	759	0.03679	63	2.1	2.6		
F85	3000	305	915	0.05015	76	2.2	2.8		
F90	2880	365	1096	0.06374	91	2.4	3.0		
F100	2600	505	1517	0.11989	126	2.6	3.3		
F110	2300	712	2137	0.16012	178	2.9	3.7		
F120	2050	1182	3547	0.34302	296	3.2	4.0		
F140	1800	1881	5642	0.69452	470	3.7	4.6		
F160	1600	3113	9339	1.21767	778	4.2	5.3		
F180	1500	5485	16455	2.01800	1371	4.8	6.0		
F200	1300	8022	23508	4.03446	1959	5.3	6.6		
F220	1100	9932	33125	8.67644	2760	5.8	7.3		
F250	1000	12606	42740	16.85095	3562	6.6	8.2		

Notes:

TABLE 07-05

Coupling Size		F40*	F45*	F50*	F60*	F70	F80	F85	F90	F100	F110	F120	F140	F160	F180	F200	F220	F250
M2 (mm)		23	23	28	36	42	47	48	50	58	50	55	26	16	30	48	56	60
Clamping Screw Torque	Nm	15	15	15	15	24	24	32	32	32	32	35	35	35	35	35	38	38

^{*} Hexabonal Socket Cap Head Clamping Screws on these sizes.

^{1.} Maximum torque figures should be regarded as short duration overload ratings for use in such circumstances as directon-line starting etc.

^{2.} All flexible tyres have an angular misalignment capacity upto 4°

INSTALLATION

INSTALLATION INSTRUCTIONS

Note: Satisfactory performance depends on correct installation and maintenance. All instructions in this manual must therefore be followed carefully.


- 1. Thoroughly clean all components, paying particular attention to the removal of the protective coating in the bore of the flanges.
- 2. Fit flanges to the shafts placing the external clamp rings on the shafts. (Where Taper-Lock® flanges are used, see separate fitting instructions supplied with the Taper-Lock® Bushes). Locate flanges so that dimension M2 is obtained (see paragraph 3). Flanges with internal clamping rings should then have the clamping rings fitted, engaging only two or three of the threads of the screws at this time.
- 3. Bring shafts into line until dimension M2 is obtained (table 07-05). If shaft end float is to occur, locate the shafts at mid-position of end float when checking dimension M2. Note that shaft ends may project beyond the faces of the flanges if required. In this event, allow sufficient space between shaft ends for end float and misalignment. Flanges should be fitted flush with the end of the shaft when used with Mill-Motor flanges.


- 4. Check parallel alignment by laying a straight edge across the flanges at several positions around the circumference. Check angular alignment by measuring gap between flanges at several positions around the circumference. It is desirable to align the coupling as accurately as possible, particularly on high speed applications.
- 5. Open out tyre and fit over coupling flanges ensuring that the tyre beads seat properly on the flanges and/or clamping rings. To ensure proper seating, it may be necessary to strike the outside diameter of the tyre with a small mallet. When seated, there should be a gap between the ends of the tyre as shown in table 6.

TABLE 07-06


COUPLING SIZE	F40 TO F60	F70 TO F120	F140	F160 TO F180	F200 TO F250
Tyre Gap in mm.	2	3	5	6.5	8

6. Tighten clamping ring screws alternately and evenly (half turn at a time) working round each flange untill the required screw torque is achieved.

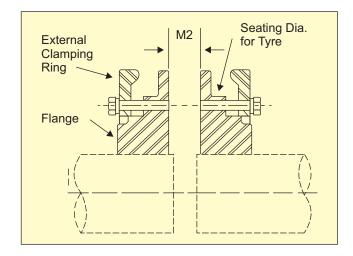

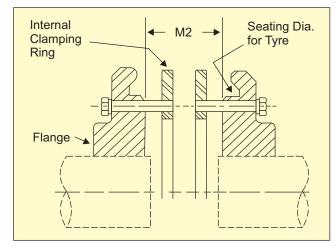

Fenner Tyre Spacer Couplings

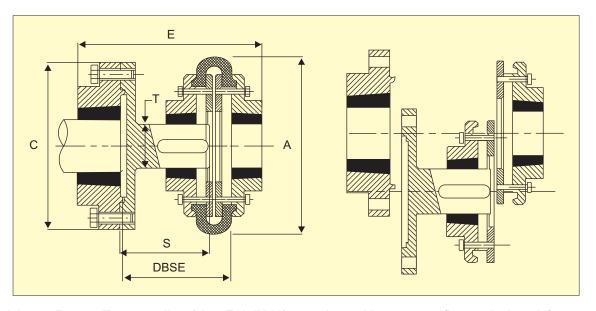

Comprising a Fenner Tyre coupling (size F40-F140) complete with a spacer flange designed for use on applications where it is an advantage to be able to move either shaft axially without disturbing the driving or driven machine; e.g. centrifugal pump rotors. Fenner Type spacer couplings are primarily designed for the standard distance between shaft end dimensions 100, 140 and 180 mm.

TABLE 07-07

SPACER SIZE	DBSE	FENNER TYRE COUPLING SIZE	SPACER BUSH SIZE	MAX. BORE	FENNER TYRE COUPLING BUSH SIZE	MAX. BORE	A	С	E	S	Т
SM12 SM12	80 100	F40 F40	1210 1210	32 32	1008 1008	25 25	104 104	118 118	134 140	77 97	25 25
SM16 SM16 SM16 SM16 SM16 SM16	100 140 100 140 100 140	F40 * F40 * F50 F50 F60	1615 1615 1615 1615 1615 1615	42 42 42 42 42 42	1008 1008 1210 1210 1610 1610	25 25 32 32 42 42	104 104 133.5 133.5 165 165	127 127 127 127 127 127	170 210 173 213 177 214	94 134 94 134 94 134	32 32 32 32 32 32 32
SM25 SM25 SM25 SM25 SM25 SM25 SM25 SM25	100 140 180 100 140 180 140 180	F70 F70 F70 F80 F80 F80 F90 F90	2517 2517 2517 2517 2517 2517 2517 2517	60 60 60 60 60 60 60	1610 1610 1610 2012 2012 2012 2012 2517 2517	42 42 42 50 50 50 60	197 197 197 211 211 211 235 235	178 178 178 178 178 178 178 178	180 220 260 193 233 273 235 275	94 134 174 94 134 174 134	42 42 42 48 48 48 48
SM30 SM30 SM30 SM30	140 180 140 180	F100 F100 F110 F110	3030 3030 3030 3030	75 75 75 75	2517 2517 2517 2517	60 60 60	254 254 279 279	216 216 216 216 216	269.5 309.5 369.5 309.5	134 174 134 174	60 60 60
SM35 SM35 SM35 SM35	140 180 140 180	F120 F120 F140 F140	3535 3535 3535 3535	90 90 90 90	3020 3020 3535 3535	75 75 90 90	314 314 359 359	248 248 248 248	297.5 327.5 296 336	134 174 134 174	75 75 80 80

^{*} F40 'B' Flange must be used to fit spacer shaft.

FENNER TAPERLOCK® BUSHES



Using Fenner Taper Taper-Lock® Bushes, it is possible for unskilled labour to achieve 'shrink fit' of pulleys, coupling etc., onto shafts using only a hexagonal wrench.

The arrangement of half-threaded holes and longitudinally split tapered bushes ensures maximum grip and fast, easy fitting. Tightening of the screws into the threaded holes in the hub forces the bush into the taper bored components, thereby effectively contracting the bore of the Taper-Lock® Bush until the equivalent of a 'shrink fit' is obtained.

Taper-Lock® Bushes are suitable for metric as well as imperial shafts.

ADVANTAGES

- · No reboring and keywaying costs.
- · Saves time and cost in fitting.
- Eliminates precision taper fitting keys.
- 239 bush size/bore combinations are available.
- · Interchangeable between many products.
- Taper bored components can be transferred to other diameter shafts by fitting alternative bore bushes.
- · Convenience in dismantling for maintenance and component replacement.
- Accommodates shaft limits of +0.051 mm/-0.127mm.

The benefits of using Taper-Lock® Bushes can be extended to include components which have a parallel bore by incorporating Taper-Lock® Adaptors, Taper-Lock® Bolt-on Hubs or Taper-Lock® weld-on Hubs.